
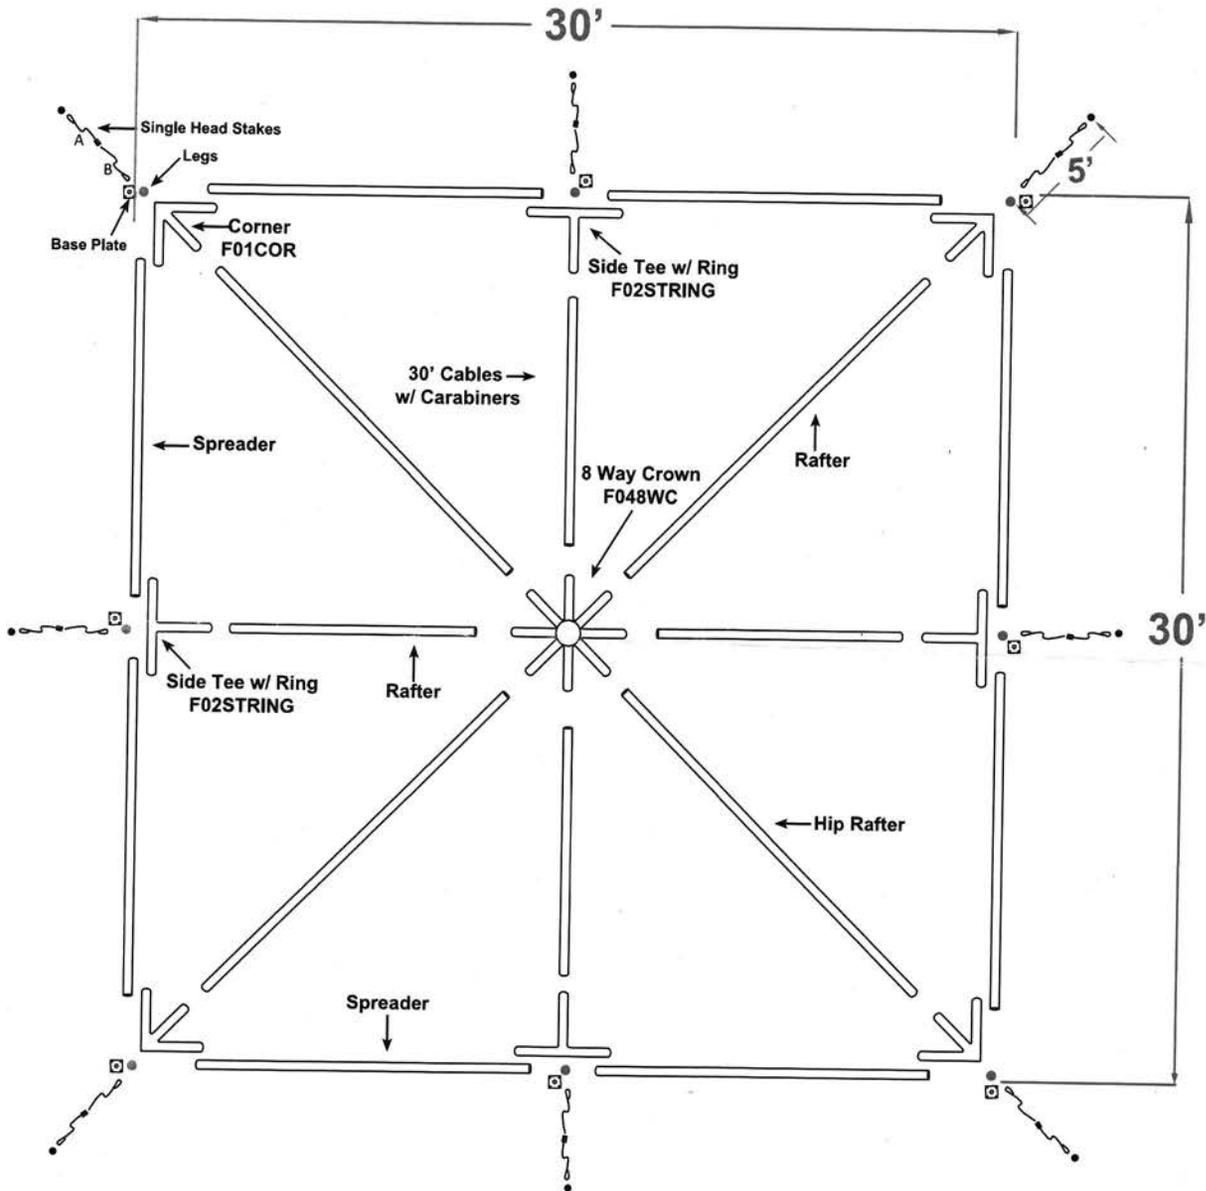
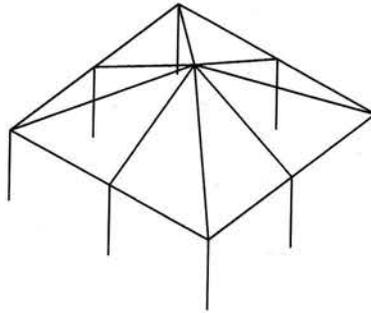


OPTIONAL ACCESSORIES

Sidewall(s)	20'	-
Sidewall(s)	30'	4

PARTS / MINIMUM STAKING LAYOUT

Ratchet Assembly

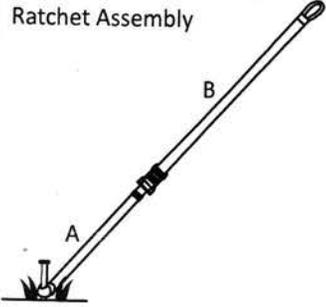

SAFETY

INSTALLATION

MAINTENANCE

CONTACTS

REQUIRED HARDWARE

30' x 30' Classic Series Frame Tent, 1 Piece

Description (Key)	Size/ Color	Qty.	Picture
Hip Rafter	21'10.5" / Red	4	
Rafter	16'1" / Green	4	
Spreader	14'4" / Red	8	
● Legs	6'8"(7'8") / Brown(Black)	8	
Corner		4	
Side Tee w/ Ring		4	
8 Way Crown		1	
Base Plates		8	
R Pin OR Pin & Bail		56	
A. Ratchet Buckle with Loop Strap	2" Ratchet 5' Loop	8	
B. Loop Strap	8' Loop	8	
● Single Head Stakes	42"	8	
NOTE: When the Ratchet Buckle with Loop Strap A is connected to Loop Strap B it forms the Ratchet Assembly.			
Tent Top	30'x30'	1 pc.	
Tent Bag	D	1	

SAFETY

INSTALLATION


MAINTENANCE

CONTACTS

INSTALLATION INSTRUCTIONS

Set Up Instructions

1. Layout the frame parts on the ground in the approximate location that they will be when the frame is assembled. (See parts / minimum staking layout diagram)

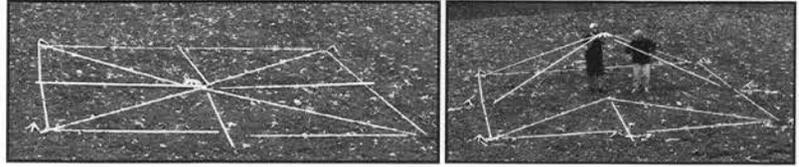

2. Place the 8-way crown in the center of the framework; the protrusions on the crown will alternate between lifted and touching the ground when it is laid on a level surface. All lifted protrusions will point to the hip rafters, angled toward the corners of the tent.

3. Connect the 8-way crown to the hip rafters (21'10.5" red):

- Each protrusion on the crown has two holes; one closer to the center (the alignment hole) and one further down the protrusion (the placement hole).
- Place a pin in the alignment hole; this keeps the rafter from moving too far onto the crown. Slide the tubing onto the protrusion until it meets the pin.
- Align the placement hole in the crown with the hole in the rafter and insert a pin.
- Remove the alignment hole pin. (*This procedure applies to all frame fittings)


4. Connect the rest of the tubing in the following order:

- Rafters (16'1" green) to 8-way crown
- Corner fittings to hip rafters (21'10.5" red)
- Side Tee fittings to rafters (16'1" green)
- Spreaders (14'4" red) to side tee fittings
- Spreaders (14'4" red) to corner fittings

5. Fasten the loop strap (B) to the fitting at each leg location.



6. Roll out a drop cloth to protect the tent from dirt and abrasions next to the frame and unroll the tent top. Pull the tent top over the frame, lifting up on the fabric or "flapping" it to create a cushion of air.

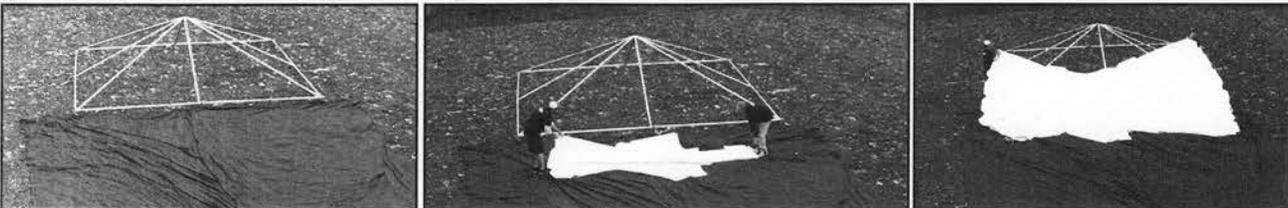

7. Loosely fasten 2 alligator straps at each corner around the perimeter tubing to secure the tent top.



SAFETY

INSTALLATION

MAINTENANCE

CONTACTS

INSTALLATION INSTRUCTIONS

8. Attach the base plates to the legs (6'8" brown, or 7'8" black), securing with a pin.



9. In windy conditions, locate the downwind side of the tent to lift first; this keeps the wind from catching the tent.

10. Step on the base plate to free both hands and lift one side of the tent frame. Do not lift one corner at a time; lift the entire side of the tent. Insert corner fittings into the top of the leg, securing with a pin. Insert all pins from the outside in; this keeps the protruding section of the pin from puncturing the tent fabric.



11. While the tent is still low to the ground fasten the rest of the alligator straps around the perimeter tubing.

12. Repeat with the other side of the tent. When finished with the corner legs, install all other legs at side tee fitting locations.


13. Center the tent top on the frame by hiding the seams behind the hip rafters and tightening the straps. Guide excess strap through the metal slide on the alligator clip.

14. Place stakes 5' out from each leg; drive stakes into the ground so that approximately 6" or less of the stake is showing.

15. Attach ratchet straps or ropes to the stakes (ratchet assemblies are standard on all Celina Classic Series Frame Tents):

Ratchets: Attach the ratchet buckle with loop strap (A) to the stakes by turning the 6" loop at the end of the ratchet inside out and pull the strap through the loop to create a noose and pull tight over the stake. Take the loop strap (B) attached to the tent and pull it through the reel bars slot of the ratchet (ratchet buckle needs to have handle facing upward at all time) and pull the loop strap (B) back towards the tent approximately 1 ½ feet. Hold the strap at this point with one hand and begin to crank the ratchet handle back and forth.

Ropes: Attach the rope around the fitting at each leg location. Tie the bottom end of the rope to the stake using a Double Loop Clove Hitch Knot - Gripping the rope down from the grommet in your left hand, take the opposite end and create two loops that overlap. Move the first loop (located on the bottom) so that it slightly overlaps on top of the second; put loops over the stake through the center gap created by the overlapping loops. Pull tight with the excess rope.

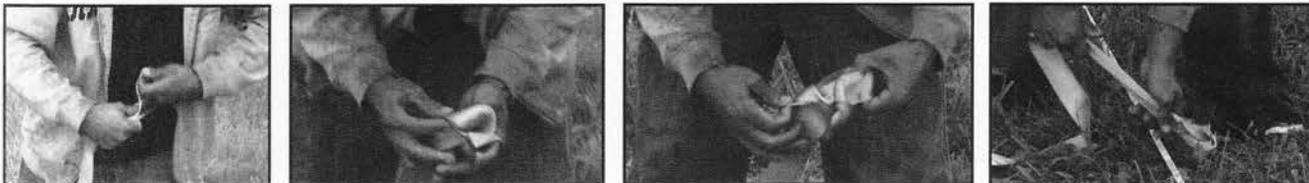

SAFETY

INSTALLATION

MAINTENANCE


CONTACTS

Striking Instructions

1. Loosen all ratchet strap assemblies.
2. Remove the side legs.
3. Unfasten all anchoring devices and alligator straps from the perimeter tubing (with the exception of 2 at each corner).
4. Remove 2 corner legs from one side and carefully set the tent frame on the ground.
5. Repeat with opposite side.
6. Unfasten the rest of the straps, completely disconnecting the tent top from the frame and stakes.
7. Roll out a drop cloth next to the frame.
8. Carefully remove the tent top from the frame, lifting up on the fabric or “flapping” it to create a cushion of air.
9. Fold and roll the tent top as tight as possible. Remember not to stand or walk on the tent top fabric.
10. Bagging (always use a drop cloth to protect the tent top from dirt and abrasions while bagging):
 - a. For Wrap-Around Tent Bag:
 - i. Lay the bag next to the tent top with the side-release buckles facing down. Roll the tent top onto the center of the bag.
 - ii. Connect the two short male and female side-release buckles; pull tight.
 - iii. Connect the remaining side-release buckle and pull tight.
 - b. For Round-Bottom Bag:
 - i. Place the folded tent top into the upright vertical position.
 - ii. Pull the round bottom tent bag over the upright tent top.
 - iii. Turn the tent top and bag over, pull the draw string tight and tie off.
11. Fold and roll up the drop cloth.
12. Disassemble all of the corner, side tee, and center crown fittings by removing the pins and sliding the tubing off of the fittings. Work from the perimeter of the frame inward.
13. Remove all stakes.

INSTALLATION INSTRUCTIONS

16. Roll excess ratchet straps and secure into the ratchet buckle.

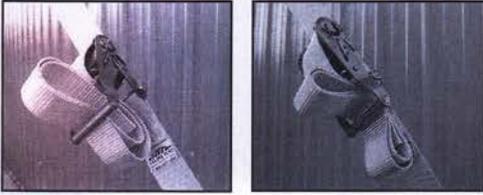

17. The tent top should now be complete. If sidewalls are desired, unroll the sidewalls between the stakes and the legs around the perimeter of the tent. Starting at a leg, clip the sidewall snap hooks to the rope line that is attached to the tent top.

Sidewall Rope Tensioning: For new tents and during its life cycle, it may be necessary to tighten the sidewall support rope that runs the perimeter of the tent top. After the tent has been set up and tensioned, locate the corner where the sidewall rope starts and stops. Securely tie off one end of the rope. While pulling against the tie-off point, work your way around the perimeter of the tent, pulling out any unnecessary rope slack. Tie off the opposite end of the rope once reached.

SAFETY

INSTALLATION

MAINTENANCE

CONTACTS